

ALIGNMENT PROTRACTOR

- 1 Place Alignment Protractor over turntable spindle
- 2 Carefully position stylus at position A. Cartridge sides should be parallel to the protractor lines
- 3 Repeat for position B. Adjust Headshell until cartridge sides are parallel with the lines at both sides.



GH 228

